

DeZURIK

Cylinder Actuator for DeZURIK Gate Valve

Instructions	<p>These instructions provide information about DeZURIK Cylinder Actuators. They are intended for personnel who are responsible for the installation, operation and maintenance of Cylinder Actuators.</p>
Safety	<p>All safety messages in the instructions are flagged with the word Caution, Warning or Danger. These messages must be followed exactly to avoid equipment damage, personal injury or death.</p> <p>Safety label(s) on the product indicate hazards that can cause equipment damage, personal injury or death. If a safety label becomes difficult to see, or if a label has been removed, please contact DeZURIK for replacement label(s).</p> <hr/> <p> WARNING! Personnel involved in the installation or maintenance of valves should be constantly alert to potential emission of process material and take appropriate safety precautions. Always wear suitable protection when dealing with hazardous process materials. Handle valves which have been removed from service with the assumption of process material within the valve.</p> <hr/>
Inspection	<p>Your cylinder actuator knife gate valve has been packaged to provide protection during shipment. Carefully inspect the unit for damage upon arrival and file a claim with the carrier if damage is apparent.</p>
Parts	<p>Recommended spare parts are listed on the assembly drawing. These parts should be stocked to minimize downtime.</p> <p>Order parts from your DeZURIK sales representative, or directly from DeZURIK. When ordering parts, please include the 7-digit part number and 4-digit revision number (example: 9999999R000) located on the data plate attached to the valve assembly. Also include the part name, the assembly drawing number, the balloon number and the quantity stated on the assembly drawing.</p>
DeZURIK Service	<p>DeZURIK Service personnel are available to install, maintain and repair all DeZURIK products. DeZURIK also offers customized training programs and consultation services. For more information, contact your local DeZURIK representative or visit our website at www.dezurik.com.</p>

DeZURIK

Cylinder Actuator for DeZURIK Gate Valve

Description The cylinder used with DeZURIK Gate Valves is a pneumatic double acting cylinder that requires a supply pressure between 60 and 100 psi.

Lubrication Cylinder lubrication is required only when the cylinder is disassembled. At reassembly, lubricate the piston seal, O-rings, piston grooves and the cylinder wall with Dow Corning No.44 lubricant.

Disassembly



WARNING!

This cylinder is a pressure vessel. Release the pressure from both ends of the cylinder before attempting any disassembly or repair

1. Relieve the pipeline pressure and the cylinder pressure.
2. Disconnect the cylinder tubing. NOTE:When flexible tubing is used, only one swivel connector per piece of tubing is installed. This swivel connector is on the cylinder port end of the tubing.
3. Remove the nuts and washers from the tie rods.
4. Remove the cylinder cap.
5. Remove the O-ring seal from the cylinder cap.
6. Remove the cylinder tube. Rotate the cylinder tube while pulling it off the piston.
7. Remove the piston seal and O-ring. Clean the parts and the grooves in the piston.
8. Remove piston rod assembly.
9. Remove O-ring from cylinder head.
10. Remove rod and O-ring from cylinder head.

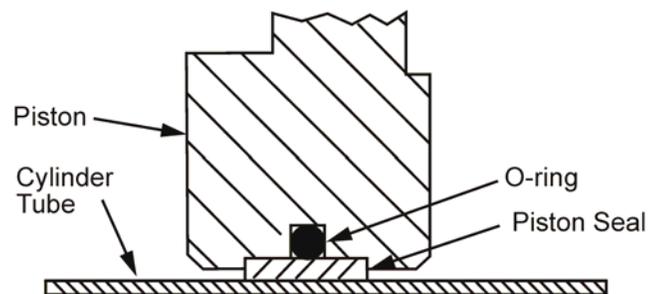


Figure 1 Piston Seal Arrangement

Reassembly

1. Install the piston rod seal as shown in Figure 2.
 - a. Clean the groove in the cylinder head and lubricate all the parts.
 - b. Insert the seal ring in the groove. Make sure the sealing ring lies flat in the groove.

Reassembly

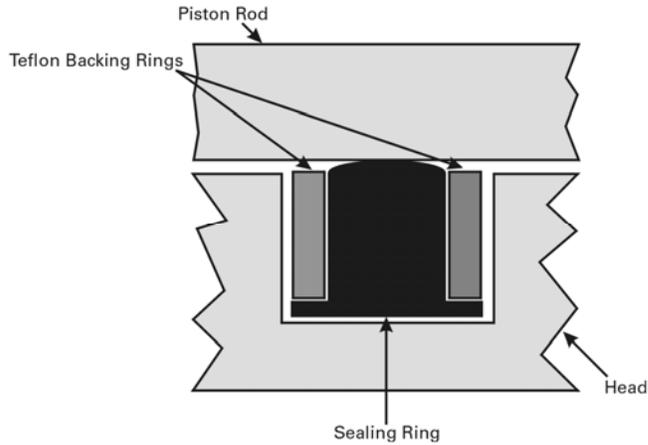


Figure 2 Rod Seal Arrangement

c. Insert the Teflon backing rings. The backing rings are cut with a bevel. Be sure the ends match and do not overlap.

2. Mount the cylinder head to the actuator.
3. Lubricate the O-ring with Dow Corning No.44 lubricant and place it on the cylinder head.
4. Carefully install the piston rod.
5. Lubricate the piston seal, groove and O-ring with Dow Corning No.44 lubricant, and place the O-ring and seal on the piston.
6. Carefully slide the cylinder tube over the piston seal. The cylinder tube and piston seal must be well lubricated with Dow Corning No.44 lubricant. Start with the tube at a 45 degree angle to the piston and rotate the tube on to the piston. On 6 inch and larger cylinders, remove tie rods as needed to allow positioning the tube at a 45 degree angle. See Figure 3.

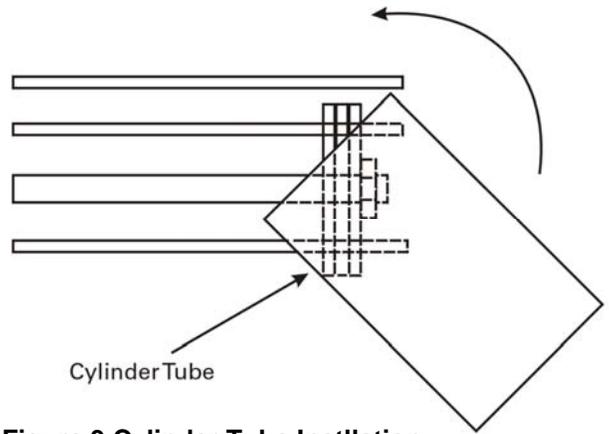


Figure 3 Cylinder Tube Installation

7. Lubricate the O-ring with Dow Corning No. 44 lubricant and place it on the cylinder cap.
8. Place the cylinder cap on the cylinder tube and place the washers and nuts on the tie rods. Tighten the nuts to the torque listed in Table A.

Table A: Torque Specifications for Tie Rod Nuts

Cylinder Size	Torque	
	Ft. Lbs.	Nm
C4	12	16
C6-C8	16	22
C10-C12	20	27

Limited Warranty

DeZURIK, Inc. ("Seller") manufactured products, auxiliaries and parts for a period of twenty-four (24) months from date of shipment from Seller's factory, are warranted to the original purchaser only against defective workmanship and material, but only if properly stored, installed, operated, and serviced in accordance with Seller's recommendations and instructions.

For items proven to be defective within the warranty period, your exclusive remedy under this limited warranty is repair or replacement of the defective item, at Seller's option, FCA Incoterms 2020 Seller's facility with removal, transportation, and installation at your cost.

Products or parts manufactured by others but furnished by Seller are not covered by this limited warranty. Seller will provide repair or replacement for other's products or parts only to the extent provided in and honored by the original manufacturer's warranty to Seller, in each case subject to the limitations contained in the original manufacturer's warranty.

No claim for transportation, labor, or special or consequential damages or any other loss, cost or damage is being provided in this limited warranty. You shall be solely responsible for determining suitability for use and in no event shall Seller be liable in this respect.

This limited warranty does not warrant that any Seller product or part is resistant to corrosion, erosion, abrasion or other sources of failure, nor does Seller warrant a minimum length of service.

Your failure to give written notice to us of any alleged defect under this warranty within twenty (20) days of its discovery, or attempts by someone other than Seller or its authorized representatives to remedy the alleged defects therein, or failure to return product or parts for repair or replacement as herein provided, or failure to store, install, or operate said products and parts according to the recommendations and instructions furnished by Seller shall be a waiver by you of all rights under this limited warranty.

This limited warranty is voided by any misuse, modification, abuse or alteration of Seller's product, accident, fire, flood or other Act of God, or your failure to pay entire contract price when due.

The foregoing limited warranty shall be null and void if, after shipment from our factory, the item is modified in any way or a component of another manufacturer, such as but not limited to, an actuator is attached to the item by anyone other than a Seller factory authorized service personnel.

All orders accepted shall be deemed accepted subject to this limited warranty, which shall be exclusive of any other or previous Warranty, and this shall be the only effective guarantee or warranty binding on Seller, despite anything to the contrary contained in the purchase order or represented by any agent or employee of Seller in writing or otherwise, notwithstanding, including but not limited to implied warranties.

THE FOREGOING REPAIR AND REPLACEMENT LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES, INCLUDING ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY OR OTHERWISE, EXPRESSED OR IMPLIED IN FACT OR BY LAW, AND STATE SELLER'S ENTIRE AND EXCLUSIVE LIABILITY AND YOUR EXCLUSIVE REMEDY FOR ANY CLAIM IN CONNECTION WITH THE SALE AND FURNISHING OF SERVICES, GOODS OR PARTS, THEIR DESIGN, SUITABILITY FOR USE, INSTALLATION OR OPERATIONS.

Disclaimer

Metric fasteners should not be used with ASME Class 150/300 bolt holes and flange bolt patterns. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, it may lead to product failure, injury, and loss of life. DeZURIK Inc. disclaims all liability associated with the use of metric fasteners with ASME Class 150/300 bolt holes and flange patterns, including but not limited to personal injury, loss of life, loss of product, production time, equipment, property damage, lost profits, consequential damages of any kind and environment damage and/or cleanup. Use of metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns is a misuse that voids all warranties and contractual assurances. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, you do so at your sole risk and any liability associated with such use shall not be the responsibility of DeZURIK, Inc. In addition to the foregoing, DeZURIK's Manufacturer's Conditions apply.

Limitation of Liability

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES WHATSOEVER, AND SELLER'S LIABILITY, UNDER NO CIRCUMSTANCES, WILL EXCEED THE CONTRACT PRICE FOR THE GOODS AND/OR SERVICES FOR WHICH LIABILITY IS CLAIMED. ANY ACTION FOR BREACH OF CONTRACT BY YOU, OTHER THAN RIGHTS RESPECTING OUR LIMITED WARRANTY DESCRIBED ABOVE, MUST BE COMMENCED WITHIN 12 MONTHS AFTER THE DATE OF SALE.

Sales and Service

For information about our worldwide locations, approvals, certifications and local representative:

Web site: www.dezurik.com E-Mail: info@dezurik.com



250 Riverside Ave. N., Sartell, MN 56377 • Phone: 320-259-2000 • Fax: 320-259-2227

DeZURIK, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this manual, are provided for your information only and should not be relied upon unless confirmed in writing by DeZURIK, Inc. Certified drawings are available upon request.