



DEZURIK ANSI/AWWA C540 HYDRAULIC CYLINDER FOR T-SERIES ACTUATORS

Instruction D10294
March 2017

Instructions

These instructions provide information about ANSI/AWWA C540 Hydraulic Cylinders. They are for use by personnel who are responsible for installation, operation and maintenance of ANSI/AWWA C540 Hydraulic Cylinders.

Safety Messages

All safety messages in the instructions are flagged with an exclamation symbol and the word Caution, Warning or Danger. These messages indicate procedures that must be followed exactly to avoid equipment damage, personal injury or death. Safety label(s) on the product indicate hazards that can cause equipment damage, personal injury or death.

Safety label(s) on the product indicate hazards that can cause equipment damage, personal injury or death. If a safety label becomes difficult to see or read, or if a label has been removed, please contact DeZURIK for replacement label(s).



WARNING!

Personnel involved in the installation or maintenance of valves should be constantly alert to potential emission of pipeline material and take appropriate safety precautions. Always wear suitable protection when dealing with hazardous pipeline materials. Handle valves, which have been removed from service with suitable protection for any potential pipeline material in the valve.

Inspection

Your ANSI/AWWA C540 Hydraulic Cylinder has been packaged to provide protection during shipment, however, it can be damaged in transport. Carefully inspect the unit for damage upon arrival and file a claim with the carrier if damage is apparent.

Parts

Recommended spare parts are listed on the assembly drawing. These parts should be stocked to minimize downtime.

Order parts from your DeZURIK sales representative, or directly from DeZURIK. When ordering parts, please include the 7-digit part number and 4-digit revision number (example: **9999999R000**) located on the data plate attached to the valve assembly. Also include the part name, the assembly drawing number, the balloon number and the quantity stated on the assembly drawing.

DeZURIK Service

DeZURIK service personnel are available to install, maintain and repair all DeZURIK products. DeZURIK also offers customized training programs and consultation services.

For more information, contact your local DeZURIK sales representative or visit our website at www.dezurik.com.

Table of Contents

Description - - - - -	4
Supply - - - - -	4
Lubrication - - - - -	4
Required Tools - - - - -	4
Closed Position Adjustment - - - - -	4
Disassembly - - - - -	4
Reassembly - - - - -	5

Description

The ANSI/AWWA C540 Water Hydraulic Double-Acting Cylinder, for use with T-Series Actuators, is intended for water hydraulic service. This cylinder can be used with pumpcheck accessories.

Supply

The maximum cylinder supply pressure is 150 psi.

Lubrication

If the cylinder is disassembled, lubricate the cylinder wall, piston seal, U-cup and U-cup groove using one of these lubricants.

- Dow Corning Molykote No. 44 (**recommended**)
- Shell Retinax AM (alternate)
- Shell Lithall MDS (alternate)

Required Tools

The cylinder is assembled with SAE fasteners. Tools required for adjustment and disassembly include a set of combination wrenches, a flat-tipped screwdriver and a small hammer.



WARNING!

This cylinder is a pressure vessel. Supply pressure must be disconnected from the cylinder and the cylinder completely relieved of pressure before disassembling the cylinder. Failure to release pressure may result in personal injury and/ or damage to other equipment.

Closed Position Adjustment

The set screw in the end of the cylinder is used to limit the cylinder stroke.

1. Pressurize the cylinder port nearest the actuator housing, closing the valve.
2. Relieve cylinder pressure. See Valve Instructions to determine closed position.
3. Loosen the lock nut and turn the set screw in the end of the cylinder in or out until the valve is in the correct closed position.
4. Reapply cylinder pressure to the port nearest the actuator housing, closing the valve, to ensure that stop is correctly set.
5. Lock the set screw in place with the nut. Be sure the thread seal is in place.

ANSI/AWWA C540 Hydraulic Cylinder for T-Series Actuators

Disassembly

Follow the steps below to disassemble the cylinder.



WARNING!

- **Servicing the actuator while the pipeline is under pressure can cause personal injury or equipment damage. Relieve pipeline pressure before servicing the actuator.**
- **Accidental operation of power actuator can cause personal injury or equipment damage. Disconnect and lock out power to actuator before servicing.**

1. Shut off the water pressure supply to the cylinder.
2. Relieve pressure in the cylinder.
3. Disconnect the tubing from the cylinder.
4. If the actuator is powered, disconnect and lock out the pneumatic, hydraulic, or electrical power to prevent accidental operation of the actuator.
5. Remove nuts and washers from the tie rods.
6. Remove cylinder cap.
7. Remove O-ring from cylinder cap.
8. Pull cylinder tube off piston, rotating cylinder while pulling.
9. Remove tie rods from cylinder head.
10. Remove nut that holds piston on piston rod, then slide piston off.
11. Remove piston seal and O-ring from piston.
12. Remove the four screws that fasten the cylinder head to the actuator housing, then slide cylinder head off the piston rod.
13. Remove rod seal and O-ring from cylinder head.

Reassembly

1. Lubricate the rod seals, then push them into place in the cylinder head as shown in Figure 1. Be sure the grooves in the U-cups face the piston end of the cylinder head.

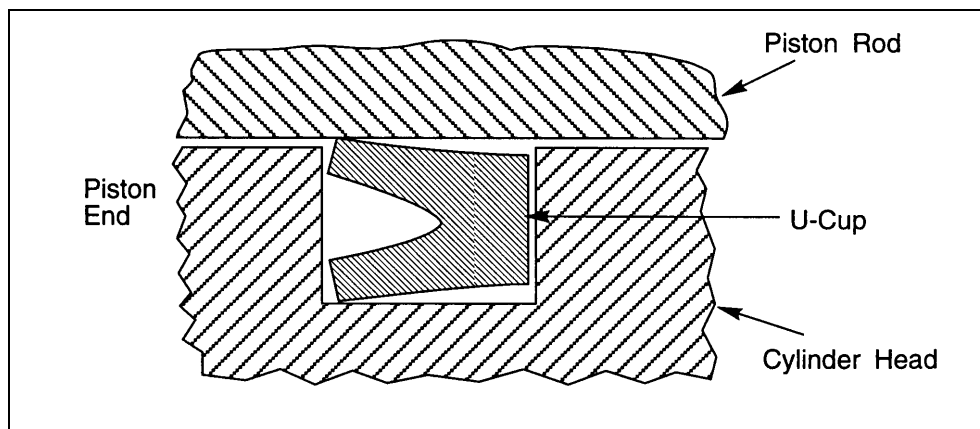


Figure 1—Piston Rod U-Cup Seal Placement

Reassembly *(continued)*

2. Be sure the vent in the cylinder head is clear.
3. Carefully slide cylinder head over piston rod until head contacts actuator housing.
4. Used four screws to fasten the cylinder head to the housing.

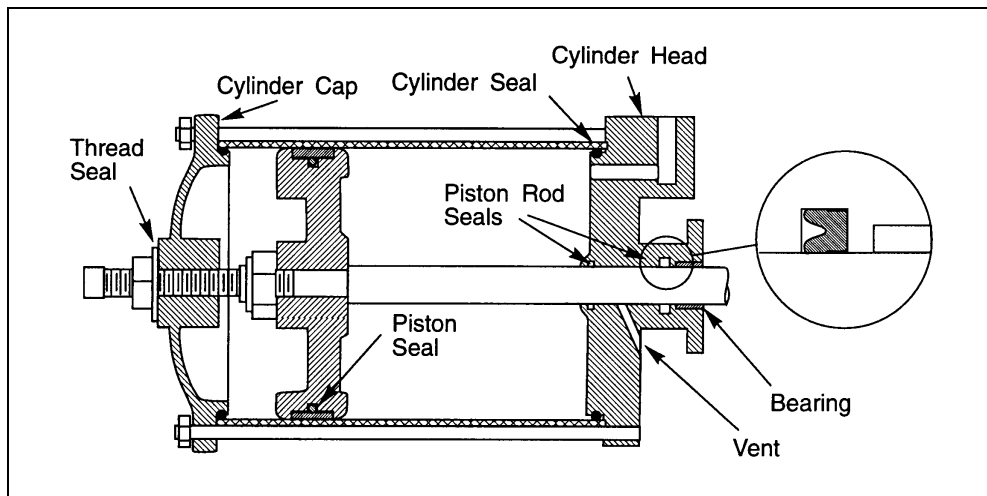
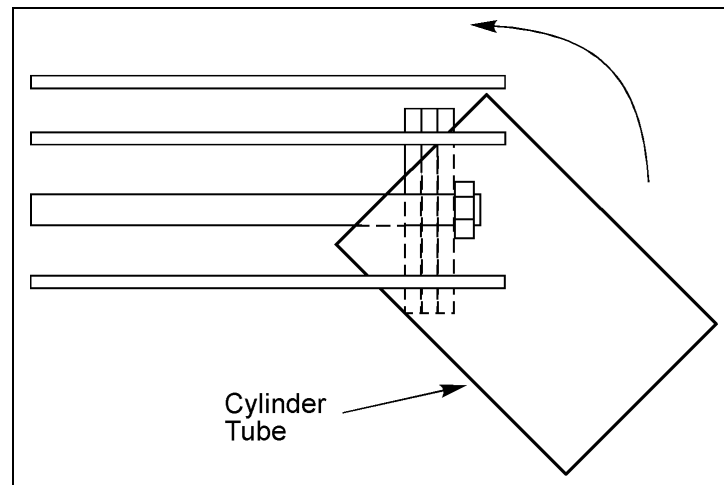


Figure 2—Cylinder Parts Location

5. Lubricate the small O-ring, then slide it into the counterbore in the piston.
6. Slide piston onto piston rod so O-ring in piston faces the cylinder head.
7. Install nut that holds piston on piston rod, then tighten nut to 45 foot pounds.
8. Lubricate the medium sized O-ring, then stretch it onto the piston until it fits into the groove.
9. Lubricate piston seal, then slide it onto the piston without stretching it any more than necessary. The seal goes into the groove over the O-ring.
10. Lubricate, then stretch one of the large O-rings into the groove in the cylinder head.
11. On **6-inch and larger** cylinders, remove one or two of the tie rods.
12. Lubricate the inside of the cylinder tube, then slide it over the piston. Start with the tube at a 45-degree angle to the piston and rotate the tube onto the piston. See Figure 3.

Reassembly (*continued*)**Figure 3—Installing Cylinder Tube**

13. Be sure vent in cylinder head is clear.
14. Thread the tie rods into the cylinder head.
15. Lubricate, then stretch the other large O-ring into the groove in the cylinder cap.
16. Slide the cylinder cap over the tie rods and push the cap in until its O-ring slides into the cylinder tube.
17. Place washers and nuts on the tie rods and tighten the nuts to the torque shown in Table A.

Table A: Cylinder Tie Rod Ends

Cylinder Size	Torque		
	(ft lbs)	(cm/kg)	(Nm)
3" & 4"	12	175	16
6" & 8"	16	225	22
10" & 12"	20	275	27

18. Check the open and closed position stops and readjust them if necessary. See the ADJUSTMENT section of these instructions and the OPEN POSITION ADJUSTMENT section of the actuator instructions.
19. If the actuator is powered, reconnect power to the actuator.

Limited Warranty

DeZURIK, Inc. ("Seller") manufactured products, auxiliaries and parts for a period of twenty-four (24) months from date of shipment from Seller's factory, are warranted to the original purchaser only against defective workmanship and material, but only if properly stored, installed, operated, and serviced in accordance with Seller's recommendations and instructions.

For items proven to be defective within the warranty period, your exclusive remedy under this limited warranty is repair or replacement of the defective item, at Seller's option, FCA Incoterms 2020 Seller's facility with removal, transportation, and installation at your cost.

Products or parts manufactured by others but furnished by Seller are not covered by this limited warranty. Seller will provide repair or replacement for other's products or parts only to the extent provided in and honored by the original manufacturer's warranty to Seller, in each case subject to the limitations contained in the original manufacturer's warranty.

No claim for transportation, labor, or special or consequential damages or any other loss, cost or damage is being provided in this limited warranty. You shall be solely responsible for determining suitability for use and in no event shall Seller be liable in this respect.

This limited warranty does not warrant that any Seller product or part is resistant to corrosion, erosion, abrasion or other sources of failure, nor does Seller warrant a minimum length of service.

Your failure to give written notice to us of any alleged defect under this warranty within twenty (20) days of its discovery, or attempts by someone other than Seller or its authorized representatives to remedy the alleged defects therein, or failure to return product or parts for repair or replacement as herein provided, or failure to store, install, or operate said products and parts according to the recommendations and instructions furnished by Seller shall be a waiver by you of all rights under this limited warranty.

This limited warranty is voided by any misuse, modification, abuse or alteration of Seller's product, accident, fire, flood or other Act of God, or your failure to pay entire contract price when due.

The foregoing limited warranty shall be null and void if, after shipment from our factory, the item is modified in any way or a component of another manufacturer, such as but not limited to, an actuator is attached to the item by anyone other than a Seller factory authorized service personnel.

All orders accepted shall be deemed accepted subject to this limited warranty, which shall be exclusive of any other or previous Warranty, and this shall be the only effective guarantee or warranty binding on Seller, despite anything to the contrary contained in the purchase order or represented by any agent or employee of Seller in writing or otherwise, notwithstanding, including but not limited to implied warranties.

THE FOREGOING REPAIR AND REPLACEMENT LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES, INCLUDING ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY OR OTHERWISE, EXPRESSED OR IMPLIED IN FACT OR BY LAW, AND STATE SELLER'S ENTIRE AND EXCLUSIVE LIABILITY AND YOUR EXCLUSIVE REMEDY FOR ANY CLAIM IN CONNECTION WITH THE SALE AND FURNISHING OF SERVICES, GOODS OR PARTS, THEIR DESIGN, SUITABILITY FOR USE, INSTALLATION OR OPERATIONS.

Disclaimer

Metric fasteners should not be used with ASME Class 150/300 bolt holes and flange bolt patterns. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, it may lead to product failure, injury, and loss of life. DeZURIK Inc. disclaims all liability associated with the use of metric fasteners with ASME Class 150/300 bolt holes and flange patterns, including but not limited to personal injury, loss of life, loss of product, production time, equipment, property damage, lost profits, consequential damages of any kind and environment damage and/or cleanup. Use of metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns is a misuse that voids all warranties and contractual assurances. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, you do so at your sole risk and any liability associated with such use shall not be the responsibility of DeZURIK, Inc. In addition to the foregoing, DeZURIK's Manufacturer's Conditions apply.

Limitation of Liability

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES WHATSOEVER, AND SELLER'S LIABILITY, UNDER NO CIRCUMSTANCES, WILL EXCEED THE CONTRACT PRICE FOR THE GOODS AND/OR SERVICES FOR WHICH LIABILITY IS CLAIMED. ANY ACTION FOR BREACH OF CONTRACT BY YOU, OTHER THAN RIGHTS RESPECTING OUR LIMITED WARRANTY DESCRIBED ABOVE, MUST BE COMMENCED WITHIN 12 MONTHS AFTER THE DATE OF SALE.

Sales and Service

For information about our worldwide locations, approvals, certifications and local representative:

Web site: www.dezurik.com E-Mail: info@dezurik.com



250 Riverside Ave. N., Sartell, MN 56377 • Phone: 320-259-2000 • Fax: 320-259-2227

DeZURIK, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this manual, are provided for your information only and should not be relied upon unless confirmed in writing by DeZURIK, Inc. Certified drawings are available upon request.